

# UWELL

Manufactured by SHENZHEN UWELL TECHNOLOGY CO., LTD.

©2019 By SHENZHEN UWELL TECHNOLOGY CO., LTD., All Rights Reserved.  
Made in china

[www.myuwell.com](http://www.myuwell.com)



MYUWELL



MYUWELL



MYUWELL



MYUWELLOFFICIAL



CALIBURN KOKO  
User Manual

## Specification

- Material: Aluminum Alloy, PP, PCTG
- Size: 67 mm\*43 mm\*12 mm
- Net Weight: 33 g
- Juice Capacity: 2 ml
- Maximum Wattage: 11 W
- Coil Resistance: 1.2  $\Omega$
- Battery Capacity: 520 mAh

(Compatible with 1.4  $\Omega$  CALIBURN pod which needs to be purchased separately)


## The Packaging Includes

- 1 × CALIBURN KOKO Pod System
- 1 × 1.2  $\Omega$  CALIBURN KOKO Refillable Pod
- 1 × Micro USB Cable
- 1 × User's Manual
- 1 × Necklace

## Features

1. Draw-activated mechanism provides a more convenient vape.
2. Refillable pod, cost-effective to use.
3. Top filling method, quick and convenient.
4. The Pro-FOCS flavor testing technology gives you an excellent vape experience.
5. The chip has multiple circuit protection functions to supply stable, safe, and reliable performance.
6. Simple and stylish appearance, with various colors available.

## Illustration

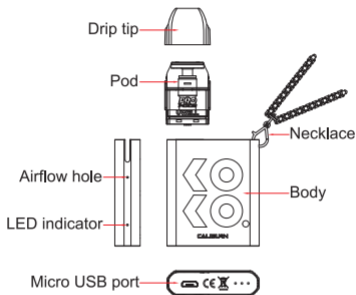

### Please read the following information before use:

1. Pull out the pod, and remove the drip tip.
2. After filling juice from the filling hole, put the drip tip back on, and install the pod back to the body.
3. Please let it sit for 10 minutes before vaping.

# Instructions

## 1. How to fill the pod

- Remove the pod from the body.
- Pull out the drip tip.
- Fill the e-liquid.
- Install the drip tip back on the pod.
- Install the pod back to the body.



### Attention:

- Do not leave the drip tip off for a long time to avoid leaking.
- Don't put juice in the center hole.
- Please let it sit for 10 minutes after first filling to avoid burning the coil.
- When filling only use a bottle that has a nozzle that can fit inside the opening of the tank which is 3.5 millimeters wide.

## 2. How to install the necklace

Please attach the clip of the necklace to the hole of the device.



## 3. Vaping

Take a draw to vape, the LED will stay on. The device will automatically stop firing when it has fired for 8 seconds then the LED will flash green 5 times.

## 4. Changing the pod

Remove the used pod from the device, replace with a new pod and install it back on.

**Attention:**

**Please let it sit for 10 minutes after first filling to avoid burning the coil.**

## 5. LED indicator

When the battery capacity is over 60%, the color of the LED is green; when it's within 30%-60%, the color of the LED is blue; when it's below 30%, the color of the LED is red; When the LED flashes red 10 times, it indicates low battery and stops output.

## 6. Short-circuit protection

When a short-circuit occurs, take a draw the LED will flash red 3 times to indicate a short-circuit and stop output.

## **7. Low power indication**

When the device has a low battery, the LED will flash red 10 times to indicate low battery and stop output.

## **8. Vaping over time indication**

The device will automatically stop firing when it has fired for 8 seconds then the LED will flash green 5 times.

## **9. Charging**

When charging the device with Micro USB cable, the indicator light flashes slowly to indicate that the product is charging. It will flash red to indicate low battery, flash blue to indicate medium power, flash green to indicate sufficient power, and the green light stays on after charging is completed.

## **Attention**

1. Please charge with certified high-quality adaptor from a reputable company and a Micro USB cable with the charging current of 5V/1A.
2. The device and adaptor may warm up when charging, keep away from flammable and explosive goods.
3. Please use a dry and soft cloth to clean the device. Keep away from water or any liquids.
4. Please remove the pod cartridge and store it separately when you are on a plane to avoid leakage due to pressure changes.
5. Please do not put the device in your pocket with other hard objects to avoid damages.
6. Please charge the device at least once a month.

7. Don't disassemble the device.
8. Avoid high temperature, low temperature and humidity during use or storage to avoid damage to the equipment.
9. The product parameters or pictures in this manual are for illustration purpose only, please refer to the actual product.

## **Safety Instruction**

Please read the following safety instructions carefully before using the product.

1. This product is only available to people who have reached the legal age of smoking. It is strictly forbidden for young children, pregnant women and women during breastfeeding or for patients with heart disease, high blood pressure, diabetes, depression and asthma.
2. Please put the product out of reach of children and pets to avoid injury.
3. When using this product, please keep away from inflammable and explosive materials to avoid injury.
4. The company does not assume any responsibility for any equipment damage or personal injury caused by user misuse.

## **Warranty Details**

Please keep the anti-counterfeit code and proof of purchase after purchasing the product. The warranty period is 180 days from the date of purchase. Our company provides warranty service (Device and atomizer only, exclude coil head and pod cartridge).

Please note that any of the following conditions are not covered by the warranty:



1. Exceeding the warranty period.
2. Damage caused by the use, maintenance, and storage that is not in accordance with the requirements as instructed.
3. Damage caused by unauthorized repair.
4. Damage caused by the usage of the components from other brands.
5. Damage caused by force majeure.

## **Verification**

1. Visit the official website [www.myuwell.com](http://www.myuwell.com) through a smartphone or PC.
2. Please enter the 16 digits authentic code, and the result will be displayed in a few seconds.
3. Please feel free to contact us via e-mail, phone or website for more help.

## **Customer Service**

We pride ourselves on manufacturing quality products and providing excellent customer service. For any issues, please contact us at [service@myuwell.com](mailto:service@myuwell.com).

\* Shenzhen UWELL Technology Co., Ltd. reserves the right of final interpretation in the user manual.

\* It is hereby stated that the markable area on the product is not enough to mark the CE and WEEE as the standard dimensions.